



FQ215

# Microwave oven

## Installation and Operating Instruction



This manual is made with 100% recycled paper.

ENGLISH

imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service, please register  
your product at

[www.samsung.com/register](http://www.samsung.com/register)





# using this manual

Thank you for purchasing a SAMSUNG speed cook oven.

Your Owner's Manual contains important safety instructions and essential information on using and caring for your new speed cook oven. Before using your oven, please read all the information in this manual and keep it for future reference. A handy quick look-up guide explaining basic cooking operations is provided inside the front cover for your convenience.

## safety information

- Before operating the appliance, please read this manual thoroughly and retain it at a safe place near the appliance for your future reference.
- Use this appliance only for its intended purpose as described in this instruction manual. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at [www.samsung.com](http://www.samsung.com).

## IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

The following symbols are used in the text of this Owner's Manual:

	Hazards or unsafe practices that may result in <b>severe personal injury or death</b> .
	Hazards or unsafe practices that may result in <b>minor personal injury or property damage</b> .
	To reduce the risk of fire, explosion, electric shock, or personal injury when using your microwave oven, follow these basic safety precaution
	Do NOT attempt.
	Do NOT disassemble.

	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note
	Important



## SEVERE WARNING SIGNS FOR INSTALLATION

- ★ The installation of this appliance must be performed by a qualified microwave service technician trained by the manufacturer. Please see the section "Installing your Microwave Oven".

Plug the power cord into the proper wall socket or higher and use the socket for this appliance only. Plug the power plug into the wall socket firmly. In addition, do not use an extension cord.

- Failure to do so and sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.

The installation of this appliance must be performed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

- Do not install this appliance near a heater, inflammable material.  
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).  
Do not install this appliance in a location where gas may leak.
  - This may result in electric shock or fire.The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
- This appliance must be properly grounded.  
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
  - This may result in electric shock, fire, an explosion, or problems with the product.
  - Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.





## CAUTION SIGNS FOR INSTALLATION

- ★ This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, noise, or problems with the product.

Install the appliance while maintaining the proper distance from the wall.

- Failure to do so may result in fire due to overheating.

The minimum height of free space necessary above the top surface of the oven.



## SEVERE WARNING SIGNS FOR ELECTRIC

- ★ Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

- ☐ Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.  
Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

- ☐ When the appliance or the cord is damaged, contact your nearest service centre.



## CAUTION SIGNS FOR ELECTRIC

- ☐ Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.



## SEVERE WARNING SIGNS FOR USING

- ★ In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Take care that the door, heater or any of the other parts do not come into contact with the body while cooking or just after cooking.

- Failure to do so may result in burns.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

When moving heating elements, make sure to use the equipment designed to move heating element while wearing safety gloves provided with the product, and see if temperature drops sufficiently (at least 10 minutes after grill or combination cooking operation) after operation.

ALWAYS use oven gloves when removing a dish from the oven to avoid unintentional burn.

Stand at arms length from the oven when opening the door.

**Reason :** The hot air or steam released may cause scalding.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions:

- Immerse the scalded area in cold water for at least 10 minutes.
- Cover with a clean, dry dressing.
- Do not apply any creams, oils or lotions.
- Contact a doctor

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Children should be supervised to ensure that they do not play with the appliance.


Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.

**WARNING :** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

**WARNING :** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

safety information \_3




-  **WARNING :** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**WARNING :** Accessible parts may become hot during use. To avoid burns young children should be kept away.

**WARNING :** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

-  Do not touch the power plug with wet hands.
- This may result in electric shock.
- Do not turn the appliance off by unplugging the power plug while an operation is in progress.
- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Failing to do so may result in electric shock, burns or injury.

Never use this appliance for purposes other than cooking.

- Failure to do so may result in fire.

Open sealed containers (baby bottles, milk bottles, etc.) and make a hole in food items such as shells or nuts (eggs, chestnuts, etc) with a knife, before cooking them.

- Failure to do so may result in burns or injury due to the item bursting.

Do not touch the inside of the appliance immediately after cooking, because the inside of the appliance is hot after being heated for a long time or heating a small amount of food.

- Failure to do so may result in burns.


Do not use aluminium foil, metal objects (such as containers, forks, etc.) or containers with golden or silver trims.

- This may result in sparks or fire.

Never heat plastic or paper containers and do not use them with the oven function.

- Failure to do so may result in fire.

Take care that food does not come into contact with

-  the heater when cooking food with the oven.
- This may result in fire.

Do not over-heat food.

- This may result in fire.

Do not heat food wrapped in paper such as magazines or newspaper.

- This may result in fire.

Do not use or place inflammable sprays or objects near the oven.

- This may result in fire or an explosion.

Do not open the door when the food in the cooking compartment is burning.

- If you open the door, an inflow of oxygen occurs and this may result in fire.

Do not insert fingers, foreign substances or metal objects such as pins or needles into the inlet, outlet and holes. If a foreign substance is inserted into any of these holes, unplug the power plug from the wall socket and contact your product provider or nearest service center.

- Failing to do so may result in electric shock or injury.

NEVER fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.

NEVER heat a baby's bottle with the teat on, as the bottle may explode if overheated.

DO NOT touch heating elements or interior oven walls until the oven be cooled down.


Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.

Do not operate this appliance if it has a damaged power cable or plug.

DO NOT operate the microwave oven when it is empty. The power will be cut off automatically for safety. You can operate normally after letting it stand for over 30 minutes. It is best to leave a glass of water inside the oven at all times. The water will absorb the microwaves energy if the oven accidentally started.

**WARNING :** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.


**WARNING :** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

-  If the appliance is flooded cut the power immediately and please contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.


- Failure to do so may result in electric shock or fire.

-  Do not attempt to repair, disassemble, or modify the appliance yourself.


## 4\_ safety information





-  - Since a high voltage current enters the product chassis, it may result in electric shock or fire.
- You may be exposed to electromagnetic waves.
- When repairing the appliance is required, contact your nearest service centre.

**WARNING :** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.


-  If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;



## CAUTION SIGNS FOR USING

-  Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags.

**Reason :** Electric arcing or sparking may occur and may damage the oven.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;

Small amounts of food require shorter cooking or heating time.


If normal times are allowed they may overheat and burn.

You may notice a Clicking sound during operation (especially when the oven is defrosting).

**Reason :** This sound is normal when the electrical power output is changing.

Young children should NEVER be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.

Children should be supervised to ensure that they do not play with the appliance.

-  Take care as beverages or food may be very hot after heating.

- Especially when feeding a child, check that it has cooled sufficiently.

Take care when heating liquids such as water or other beverages.

- Make sure to stir during or after cooking.
- Avoid using a slippery container with a narrow neck.
- Remove the container at least 30 seconds after heating.
- Failing to do so may result in an abrupt overflow of the contents and cause burns.

Do not hold food or any part there of during or

-  immediately after cooking.

- Use cooking gloves because it may be very hot and you could burn yourself.
- If you pull the ceramic dish or well-being multi-purpose pan forwards, food may spill and this may result in burns.

When the surface is cracked, turn the power switch of the appliance off.

- Failure to do so may result in electric shock.

Do not scratch the glass of the oven door with a sharp object.

- This may result in the glass being damaged or broken.

Do not stand on top of the appliance or place objects (such as laundry, oven cover, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- Items, such as a cloth, may be caught in the door.
- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.

- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not apply excessive pressure or impact to the door or to the inside of the appliance.

- This may result in deformation to the product or injury due to electric wave leakage.
- Hanging onto the door may result in the product falling and causing injury.
- If the door is damaged, do not use the appliance and contact your nearest service centre.

Do not place the appliance over a fragile object such as a sink or glass object.

- This may result in damage to the sink or glass object.

Use the appliance only after closing the door.

- If you use the appliance when it is contaminated by foreign substances such as food waste, it may result in problems with the appliance.

Take care when removing the wrapping from food that has just been taken out of the appliance.


- If the food is hot, hot steam may be emitted abruptly when removing the wrapping and you may burn yourself.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.

Do not put your face or body close to the appliance while cooking or when opening the door just after cooking.



-  - Take care that children do not come close to the appliance.
- Failure to do so may result in burns from the heat.

Do not place food or heavy objects over the door when opening the door.

- The food or object may fall and this may result in burns or injury.


Do not abruptly cool the door, the inside of the appliance, or the dish by pouring water over it during or just after cooking.

- This may result in damage to the appliance. The steam or water spray may result in burns or injury.

Appliances are not intended to be operated by means of an external timer or separate remote-control system.



## SEVERE WARNING SIGNS FOR CLEANING

-  Do not clean the appliance by spraying water directly onto it.
- Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket and remove food waste from the door and cooking compartment.

- Failure to do so may result in electric shock or fire.


Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Do not use your microwave oven to dry papers or clothes.

For your safety, do not use high-pressure water cleaners or steam jet cleaners.



## CAUTION SIGNS FOR CLEANING

-  The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

-  Take care not to hurt yourself when cleaning the appliance (external/internal).

- You may hurt yourself on the sharp edges of the appliance.

Do not clean the appliance with a steam cleaner.

- This may result in corrosion.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- (a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- (b) Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- (c) Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
  - (1) Door (bent)
  - (2) Door hinges (broken or loose)
  - (3) door seals and sealing surfaces

- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.



## **CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)**

---

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



# contents

---

## **INSTALLING YOUR MICROWAVE OVEN**

9

### **OVEN FEATURES**

12

### **BEFORE YOU BEGIN**

15

### **OVEN USE**

16

12 Oven features

13 Accessories

14 Controls panel

15 Setting the clock

16 Types of heating

18 Using oven mode

25 Setting cook time

26 Cooking time reservation function

27 Using speed menu mode

30 Using speed defrost mode

32 How a microwave oven works

33 Using microwave mode

43 Switching off the beeper

43 Child safety lock

44 Using the steam clean feature

45 Cleaning your microwave oven

### **CLEANING AND CARE**

44

### **TROUBLESHOOTING & ERROR CODE**

46

46 Storing and repairing your  
microwave oven

47 Troubleshooting

48 Error code

### **INSTALLATION & WIRING INSTRUCTION**

49

49 Wiring instruction

50 Cooking instructions on food  
packaging

51 Cooking instruction

### **TECHNICAL SPECIFICATIONS**


52

52 Technical specifications





# installing your microwave oven

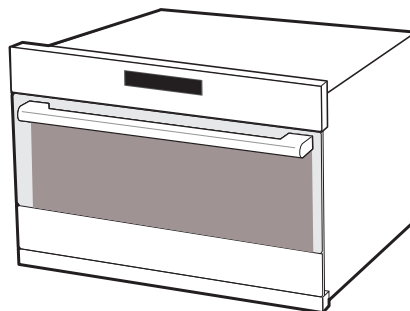

## General

### Technical Information

Electrical Supply:	230 V - AC, 50 Hz
Power consumption:	3150 W
Dimensions (w x h x d):	596 X 460 X 520 mm

This appliance complies with EU regulations

### Disposal of Packaging and Appliance

Packaging is recyclable.

Packaging may consist of the following materials:

- cardboard;
- polyethylene film (PE);
- CFC-free polystyrene (PS rigid foam).

Please dispose of these materials in a responsible manner in accordance with government regulations.

The authorities can provide information on how to dispose of domestic appliances in a responsible manner.

### Safety

This appliance should only be connected by a qualified technician.

The combi steam oven is NOT designed for use in a commercial cooking setting. It should be used exclusively for cooking food in a home setting.

The appliance is hot during and after use. Exercise caution when young children are present.


### Electrical connection

The house mains to which the appliance is connected should comply with national and local regulations.


If you wish to make a fixed connection, ensure that a multipolar switch with a minimum contact spacing of 3 mm is fitted in the supply line.




**Fig. 1**

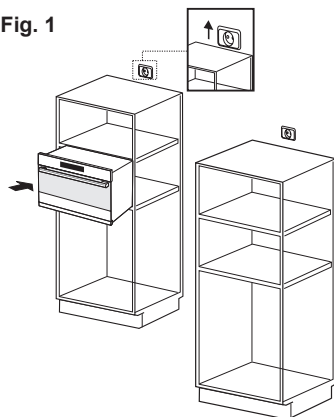


**Fig. 2**

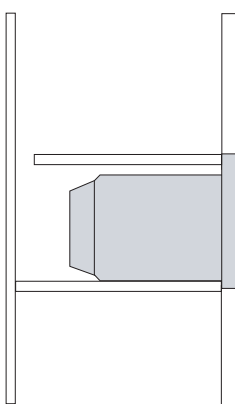


**Fig. 3**

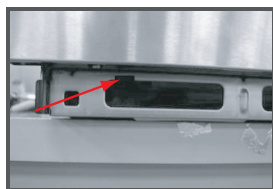

**Fig. 3.1**

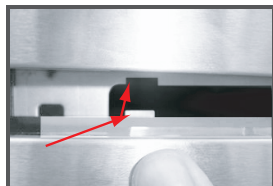

**Fig. 3.2**

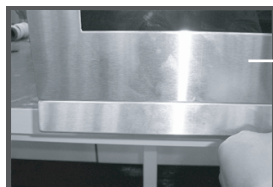


**Fig. 3.3**




**Fig. 3.4**

**Fig. 4**


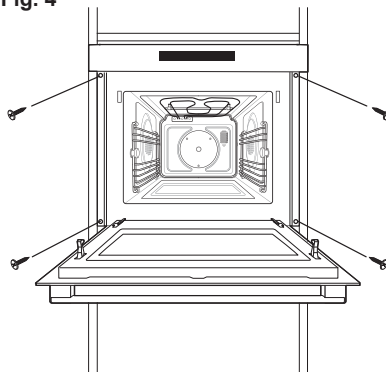


**Fig. 5**

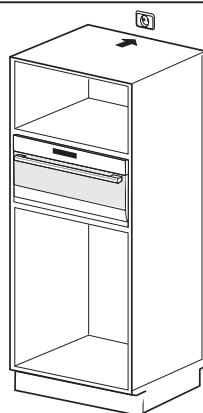




- Fig. 1 Slide the microwave oven partly into the recess. Lead the connection cable to the power source.
- Fig. 2 Slide the microwave oven completely into the recess.
- Fig. 3 Fig. 3.1 there are squared holes.  
Fig. 3.2 align hooks of DECO with squared holes.  
Fig. 3.3 insert hooks into squared holes by inclining DECO.  
Fig. 3.4 push downward to assemble.
- Fig. 4 Fasten the microwave oven using the four screws (4 x 20 mm) provided.
- Fig. 5 Make the electrical connection. Check that the appliance works.

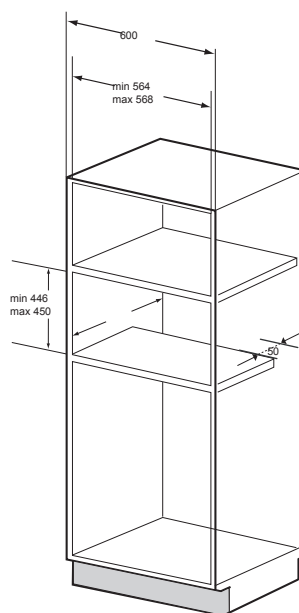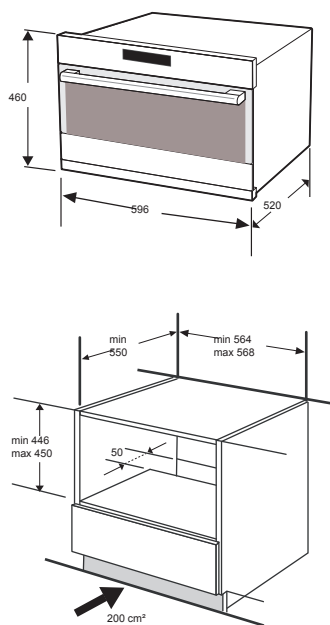



# oven features

## OVEN FEATURES

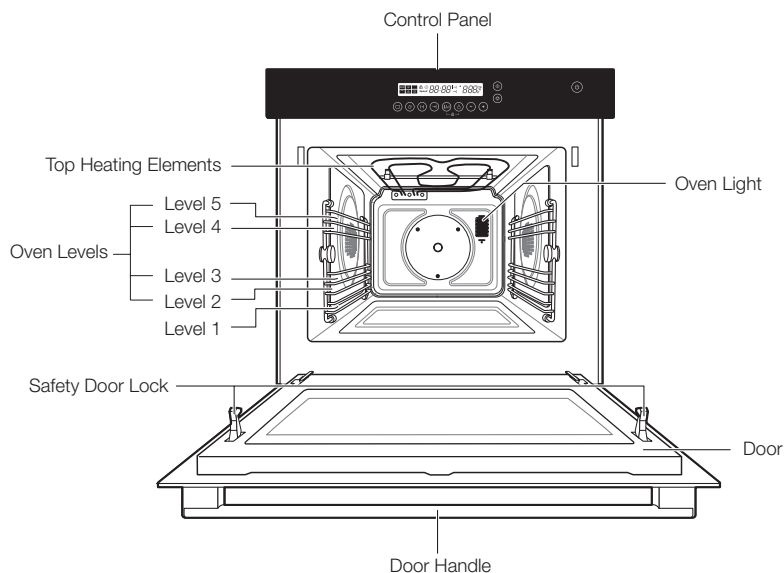

### Note


- Shelf levels are numbered from the bottom up.
- The levels 4 and 5 are mainly used for grill function.
- The microwave level is mainly used for microwave function.
- Please refer to Cooking Guides provided throughout this booklet to determine appropriate shelf level for your dishes.






## ACCESSORIES


The following accessories are provided with your microwave oven.

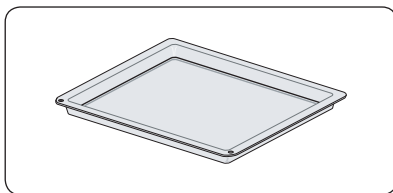


- 1** Ceramic Tray.  
(Useful for Microwave Mode)

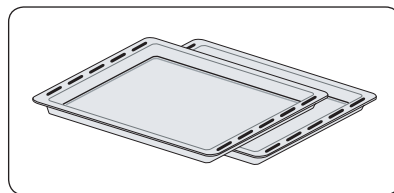

- 2** Two Baking Trays.  
(DO NOT use for Microwave Mode)

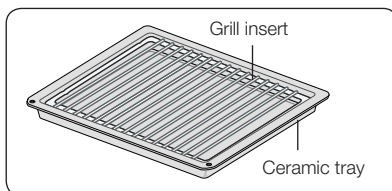

- 3** Grill Insert for Ceramic Tray.  
(Useful for Speed Menu and Grill Mode)

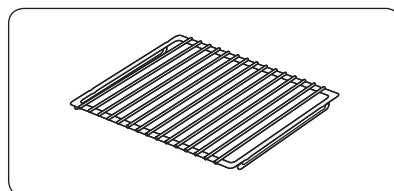

- 4** Oven Rack.  
(DO NOT use for Microwave Mode)




### Note

Please refer to Cooking Guides provided throughout this booklet to determine appropriate accessory for your dishes.



## CONTROLS PANEL

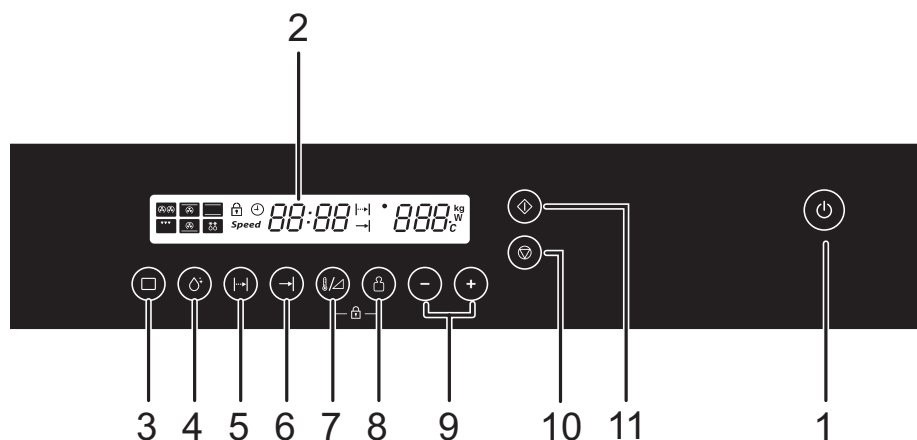

- |                                   |                                     |
|-----------------------------------|-------------------------------------|
| 1. POWER SAVE BUTTON              | 7. TEMPERATURE / POWER LEVEL BUTTON |
| 2. DISPLAY                        | 8. WEIGHT BUTTON                    |
| 3. COOKING FUNCTION SELECT BUTTON | 9. CONTOL BUTTON                    |
| 4. STEAM CLEAN BUTTON             | 10. STOP / CANCEL BUTTON            |
| 5. COOKING TIME BUTTON            | 11. START BUTTON                    |
| 6. START TIME BUTTON              |                                     |



### Power save button

- If you press the power save button, the lights for the button are turned off, As a result, all buttons other than the power save button are deactivated.
- Press the power save button again will turn the lights of the other buttons on. Consequently, all buttons are reactivated.
- If you don't press any button during 5 minutes, it will be changed to power save mode.







# before you begin

## SETTING THE CLOCK


When connecting the power for the first time, please use the product after setting the time. When the appliance is first plugged in, the DISPLAY lights up. After three seconds, the **COOKING TIME** symbol and “12:00” blink on the DISPLAY.

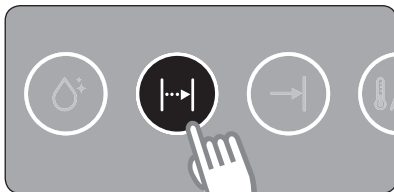


- 1** Press **COOKING TIME** button. The “12” starts blinking.

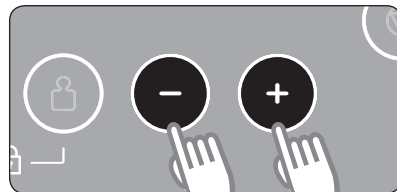

- 2** Press **CONTROL** button to set hour.

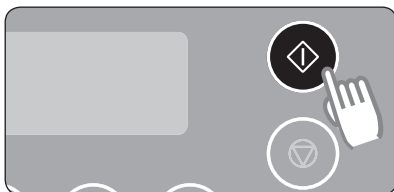

- 3** Press **START** button again. The “00” starts blinking.

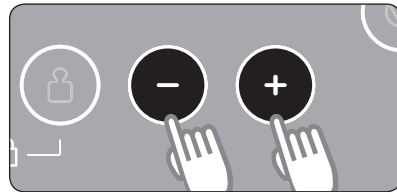

- 4** Press **CONTROL** button to set minute.



- 5** Press **START** button again. The clock sets by itself within 5 seconds.










# oven use

## TYPES OF HEATING

The following chart summarizes the various heating modes and settings available on your oven. Use the Cooking Guides in the pages that follow to determine the appropriate mode and setting for all your recipes.

### Oven Mode

The following table represents the various oven modes and settings of your oven. Use the cooking guide tables for those modes as guidelines for cooking.


Mode	Description
	<b>Dual Convection Setting</b> Food is heated by hot air from the left and right sides of the oven. This setting provides uniform heating and is ideal for baking.
	<b>Convection + Top Heat Setting</b> Hot air and top heating element combine, making this setting ideal for crisping and browning. Especially recommended for meats.
	<b>Conventional Heat Setting</b> Heat comes from top and bottom heating elements. This setting is suitable for baking and roasting.
	<b>Grill Setting</b> Food is heated by the top heating element.
	<b>Convection + Bottom Heat Setting</b> Hot air and the bottom heating element combine so food can be crisped and browned.








## Speed Menu Mode

Mode	Description
	Choose from twelve pre-programmed speed menu settings to conveniently cook, roast or bake your favourite foods. Cooking time and power level are automatically set. Simply select the programme and weight to start cooking.

## Speed Defrost Mode

Mode	Description
	Choose from five pre-programmed speed defrost settings for defrosting. Defrosting time and power level are automatically set. Simply select the programme and weight to start defrosting.

## Microwave Mode


Mode	Description
	Microwave energy is used to cook and defrost foods. It provides fast efficient cooking without changing the colour or form of food. Power level and cooking time are manually set to suit various dishes.



## USING OVEN MODE

Five settings are available under this mode. Check Cooking Guides on pages 19-23 to determine appropriate setting.

### Setting Oven Mode

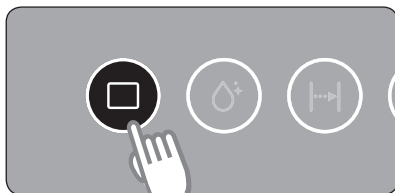

- 1** Press **COOKING FUNCTION SELECT** button and select the mode.

	Dual Convection	
	Convection + Top Heat	
	Conventional Heat	
	Grill	
	Convection + Bottom Heat	




#### Note


The convection heater and grill heater switch on and off constantly to regulate the temperature.



- 2** To change temperature, press **TEMPERATURE / POWER LEVEL** button and press **CONTROL** button

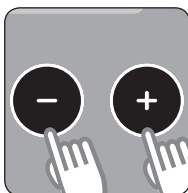

- 3** To set cooking time, press **COOKING TIME** button and press **CONTROL** button to set desired cooking time.

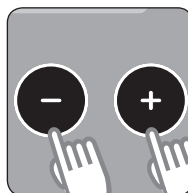



- 4** Press the **START** button.
- The **TEMPERATURE** indicator on display will be lit and the indicator will blink after the temperature is reached.

**Note**

- 1) During cooking, **COOKING TIME** and **TEMPERATURE** are available to change the setting.
- 2) In Oven Mode settings, the convection heater and top and bottom heating elements switch off and on throughout cooking to regulate the temperature.
- 3) During cooking, the inside temperature is displayed by pressing **TEMPERATURE / POWER LEVEL** button at the same time.


**Important**

When using Oven Mode, be sure glass baking dishes are suitable for 40-250 °C cooking temperatures.



## Dual Convection ( ) Setting

Food is heated by hot air from the left and right sides of the oven. This setting provides uniform heating and is ideal for baking.

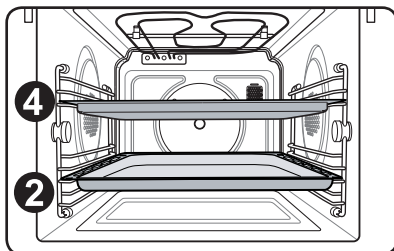

When you cook on two baking trays at the same time, place the trays on level **2**, and level **4**.

\* Please ensure that glass baking dishes are suitable for 40-250 °C cooking temperatures.

## Cooking guide

Use temperatures and times in this table as guidelines for baking. We recommend to preheat the oven with dual convection mode.

Food item	Shelf level	Temperature (°C)	Accessory	Time (h)
Hazelnut cake square mould	2	160-170	Oven rack	1:00-1:10
Lemon cake ring-shaped or bowl mould	2	150-160	Oven rack	0:50-1:00
Sponge cake	3	150-160	Oven rack	0:35-0:45
Fruit flan base	3	150-170	Oven rack	0:25-0:35
Flat streusel fruit cake (yeast dough)	3	150-170	Baking tray	0:30-0:40
Croissants	3	170-180	Baking tray	0:10-0:15
Bread rolls	2	180-190	Baking tray	0:10-0:15
Cookies	3 / 4	160-180	Two baking trays	0:10-0:20



### Note


Preheating is recommended.





## Convection + Top Heat ( ) Setting

Hot air and top heating element combine, making this setting ideal for crisping and browning. This setting is especially recommended for cooking meats.

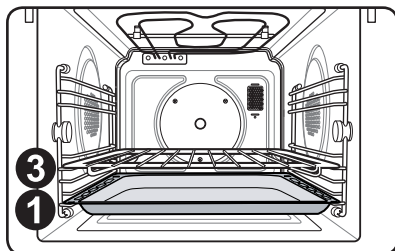

When cooking meat, place on rack on Level **3** and set baking tray on Level **1** to catch drippings.

\* Please ensure that glass baking dishes are suitable for 40-250 °C cooking temperatures.

### Cooking guide

Use temperatures and times in this table as guidelines for roasting.

We recommend to preheat the oven using Convection+Top Heat mode.

Put meat on oven rack, follow shelf level advice in the table and use baking tray as oil pan on level 1.

Food item	Shelf level	Temperature (°C)	Accessory	Time (h)
Beef roast beef / 1 kg medium	3 / 1	170-190	Oven rack / Baking tray	1:00-1:30
Pork shoulder joint / Roll 1 kg	3 / 1	180-200	Oven rack / Baking tray	1:30-2:00
Lamb roast lamb / Leg of lamb 0.8 Kg	2 / 1	190-210	Oven rack / Baking tray	0:50-1:20
Chicken whole Chicken 1 Kg	3 / 1	170-190	Oven rack / Baking tray	0:50-1:10
Fish whole trouts 2 pcs / 0.5 Kg	4 / 1	170-180	Oven rack / Baking tray	0:30-0:40
Duck breast 0.3 Kg	4 / 1	180-200	Oven rack / Baking tray	0:25-0:35




#### Note

Preheating is recommended.



## Conventional Heat ( ) Setting

Heat comes from top and bottom heating elements. This setting is suitable for baking and roasting.

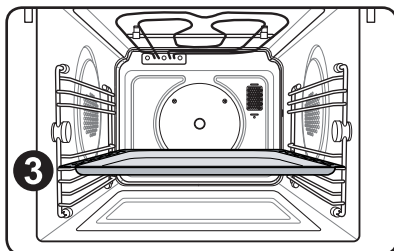

Baking tray or oven rack is usually placed on Level **3**.

\* Please ensure that glass baking dishes are suitable for 40-250 °C cooking temperatures.

### Cooking guide

Use temperatures and times in this table as guidelines for baking. We recommend to preheat the oven with Conventional Heat mode.

Food item	Shelf level	Temperature (°C)	Accessory	Time (h)
Lasagne	3	200-220	Oven rack	0:25-0:35
Vegetables gratin	3	180-200	Oven rack	0:20-0:30
Potato gratin	3	180-200	Oven rack	0:25-0:35
Frozen pizza baguettes	3	160-180	Baking tray	0:10-0:15
Oven chips	3	200-220	Baking tray	0:15-0:20
Marble cake	3	180-200	Oven rack	0:50-1:10
Muffins	3	180-200	Oven rack	0:10-0:15
Cookies	4	180-200	Baking tray	0:08-0:15



#### Note


Preheating is recommended.





## Grill ( ) Setting

Food is heated by the top heating elements.

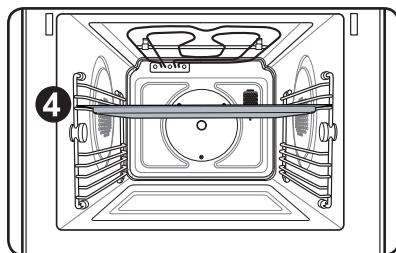

For grilling, ceramic tray with grill insert is usually placed on Level **4**.

\* Please ensure that glass baking dishes are suitable for 40-250 °C cooking temperatures.

## Cooking guide

Use temperatures and times in this table as guidelines for grilling.  
Set 220 °C grill temperature, preheat for 3 minutes.

Food item	Shelf level	1 <sup>st</sup> side time (min.)	2 <sup>nd</sup> side time (min.)	Accessory
Kebab spits	4	8-10	6-8	Grill insert with ceramic tray
Pork steaks	4	7-9	5-7	Grill insert with ceramic tray
Sausages	4	4-6	3-5	Baking tray
Chicken pieces	4	10-15	8-10	Grill insert with ceramic tray
Salmon steaks	4	8-12	6-10	Grill insert with ceramic tray
Sliced vegetables	5	5-7	3-5	Baking tray
Toast	5	2-3	1-2	Oven rack
Cheese toasts	5	4-5	-	Oven rack




### Note

Recommended temperature for grilling is 220 °C.  
Preheating for three minutes is recommended.



## Convection + Bottom Heat ( ) Setting

Hot air and the bottom heating element combine to heat food. This is a useful setting for crisping and browning.

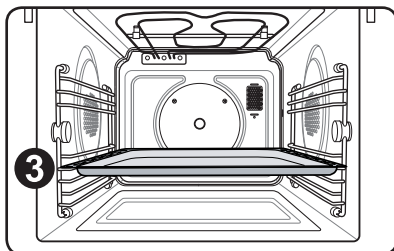

Baking tray or oven rack is often used on Level **3**.

\* Please ensure that glass baking dishes are suitable for 40-250 °C cooking temperatures.

### Cooking guide

Use temperatures and times in this table as guidelines for baking. We recommend to preheat the oven with dual convection mode.

Food item	Shelf level	Temperature (°C)	Accessory	Time (h)
Fresh pizza	3	180-200	Baking tray	15-25
Chilled pre-baked quiche / Pie	2	180-200	Oven Rack	10-15
Frozen self rising pizza	2	180-200	Baking tray	15-20
Frozen pizza	3	200-220	Oven Rack	10-15
Chilled pizza	3	180-220	Baking tray	8-15
Frozen puff pastry with Fruit filled	2	180-200	Baking tray	10-15



#### Note


Preheating is recommended.








## SETTING COOK TIME

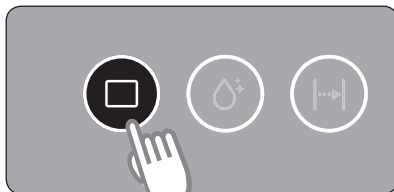


- 1** Press the **COOKING FUNCTION SELECT** button to the desired oven function.

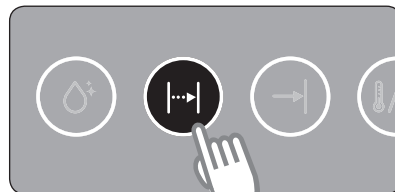


- 2** Press **COOKING TIME** button.

**Note :** If there is no further entry on the control panel for 5 seconds, start key will blink.

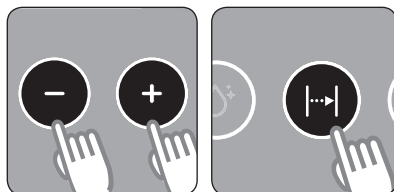

- 3** Press **CONTROL** button and **COOKING TIME** button.
- 1) After 5 seconds, setting cook time ends automatically and **START** button blinks.
  - 2) Press **COOKING TIME** button to end setting cook time.

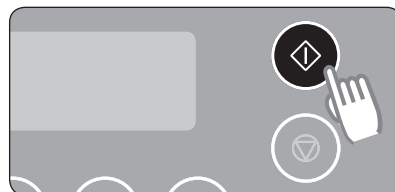

- 4** Press **START** button the oven will start promptly.

- 5** When the set time has elapsed, an audible signal sounds and the oven switches itself off.



### Note


More / Less function. During cooking, you can adjust the pre-set cooking time with **CONTROL** for better cooking performance



## COOKING TIME RESERVATION FUNCTION

**Example :** Current time : 12:00.


Cook time : 2:00 if you wish to start cooking at 18:00.

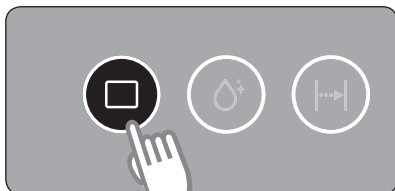


- 1** Press the **COOKING FUNCTION SELECT** button to the desired oven function.



- 2** Press the **COOKING TIME** button and enter the desired cook time. (2:00)

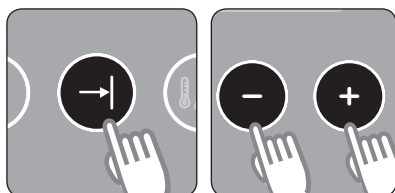

- 3** Press **START TIME** button.  
▶ Enter the desired START Time. (18:00)

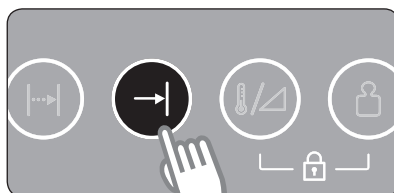

- 4** Press **START TIME** button  
▶ The oven automatically starts at the reserved time of 18:00.  
▶ The Start Time is displayed at the start of cooking.



### Note


- Start Time is displayed when reservation is completed.
- Cook Time and Start Time can be changed before the reserved time.




## USING SPEED MENU MODE

Speed Menu Mode allows you to choose from twelve pre-programmed settings to conveniently cook, roast or bake your favourite foods. Cooking time and power level are automatically set. Simply select one of the twelve settings and set the weight to start cooking.


### Setting Speed Menu Mode

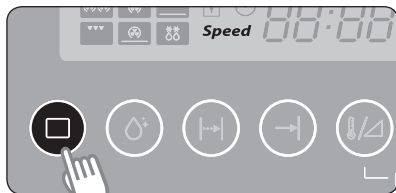


**1** Press **COOKING FUNCTION SELECTOR** button to Speed Menu position.

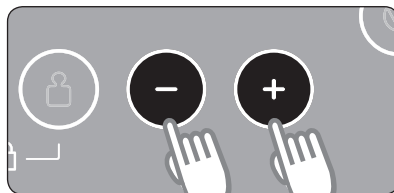


**2** Press **CONTROL** button to select desired Speed Menu setting. Refer to table on pages 27-28 for a description of the 12 Speed Menu settings.

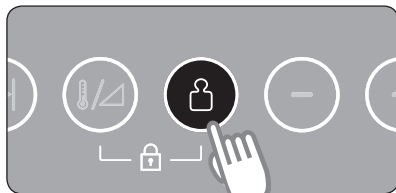

**3** Press **WEIGHT** button to change weight.

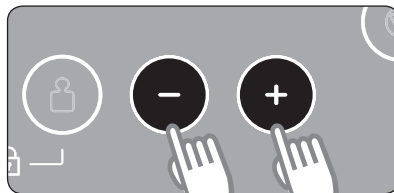

**4** Press **CONTROL** button to select desired weight.

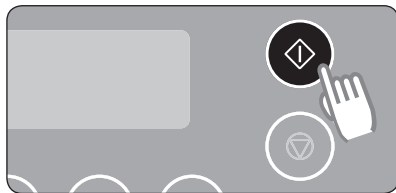

**5** Press the **START** button.



#### Note

- Some of the speed menus are continuous. Others require the food to be turned over. the oven will beep to prompt you.
- The oven temperature set during the operation of the speed menu is displayed.
- Temperatures and times cannot be changed during cooking.



## Guide to Auto Speed Menu Settings

The following table presents 12 Auto Programmes for Speed Cooking, Roasting and Baking.

It contains its quantities, standing times and appropriate recommendations. These auto programmes contain special cook modes, which have been developed for your convenience.

No	Food item	Weight (kg)	Accessory	Shelf level	Recommendation
1	Frozen pizza	0.1-0.2 0.2-0.3 0.3-0.4 0.4-0.5	Grill insert with ceramic tray	4	Put frozen pizza in the middle of grill insert with ceramic tray.
2	Frozen oven chips	0.2-0.4 0.4-0.6 0.6-0.8	Baking tray	3	Distribute frozen Oven Chips on metal baking tray.
3	Frozen croquettes	0.4-0.5 0.5-0.6 0.6-0.7 0.7-0.8	Grill insert with ceramic tray	4	Put frozen potato croquettes evenly on grill insert with ceramic tray.
4	Frozen lasagne	0.3-0.4 0.5-0.6 0.7-0.8 0.9-1.0	Ceramic tray	3	Put frozen lasagne in a suitable glass pyrex or ceramic dish. After reheating let stand for 3-4 minutes.
5	Frozen fish gratin	0.3-0.4 0.5-0.6 0.7-0.8	Ceramic tray	3	Put frozen fish gratin in a suitable glass pyrex or ceramic dish. After cooking stand for 3-4 minutes.
6	Chicken pieces	0.2-0.4 0.4-0.6 0.6-0.8 0.8-1.0	Grill insert with ceramic tray	4	Brush chilled chicken pieces with oil and spices. Put on grill insert with ceramic tray with the skin-side down. Turn over, as soon as the oven beeps. After cooking let stand for 2 minutes.
7	Whole chicken	0.8-0.9 1.0-1.1 1.2-1.3 1.4-1.5	Grill insert with ceramic tray	3	Brush chilled chicken with oil and spices and put breast-side-down on the grill insert with ceramic tray. Turn over, as soon as the oven beeps. After cooking let stand for 5 minutes.
8	Beef steaks	0.3-0.6 0.6-0.8	Grill insert with ceramic tray	4	Put beef steaks side by side in the middle of grill insert with ceramic tray.
9	Roast beef	0.7-0.8 0.9-1.0 1.1-1.2 1.3-1.5	Grill insert with ceramic tray	3	Marinate roast beef and put on grill insert, set on ceramic tray with the fat side down. Turn over as soon as the oven beeps. After cooking wrap in aluminium foil and let stand for 5-10 minutes.





No	Food item	Weight (kg)	Accessory	Shelf level	Recommendation
10	Baked potatoes	0.2-0.4 0.4-0.6 0.6-0.8 0.8-1.0	Grill insert with ceramic tray	4	Wash and clean potatoes and pierce with a fork. Put potatoes (each 200-250 g) side by side on grill insert with ceramic tray. After cooking let stand for 3-5 minutes.
11	Cake	0.5-0.6 0.7-0.8 0.9-1.0	Ceramic tray	3	Put dough into suitable sized round glass pyrex baking dish. This programme is suitable for batter such as marble cake, lemon cake and hazelnut cake.
12	Muffins	0.5-0.6 0.7-0.8	Oven rack	3	Put muffin dough in metal muffin dish, suitable for 12 muffins. Set dish on oven rack. 0.5-0.6 kg weight range is recommended for muffins of each 45 g, 0.7-0.8 kg weight range is recommended for medium sized muffins of each 65 g.

**Important**

Most of Speed Menu Mode settings use microwave energy to heat food. Therefore guidelines for cookware and other microwave safety precautions must be strictly observed when using this mode.

**Warning**

When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.



## USING SPEED DEFROST MODE


### Setting Speed Defrost Mode

Choose from five pre-programmed microwave settings for defrosting. Defrosting time and power level are automatically set. Simply select the setting and weight to start defrosting.


Open the door. Place the frozen food in the centre of the ceramic tray. Position is level 1. Close the door.




**1** Press **COOKING FUNCTION SELECT** button to Speed Defrosting (\*\* symbol).

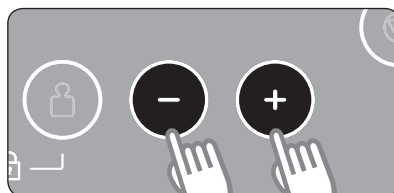

**2** Press **CONTROL** button to choose desired defrost item. Refer to table on page 31 for a description of the 5 Speed Defrost settings.

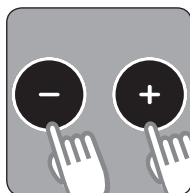

**3** Press **WEIGHT** button and select food weight by press the **CONTROL** button.

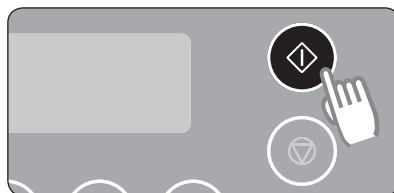

**4** Press **START** button to start cooking.

When cooking has finished, the oven will beep and flash "End" four times. The oven will then beep one time per minute for 3 minutes.



#### Result

- Defrosting begins.
- The oven beeps half way through defrosting to remind you to turn the food over.



#### Important

- Use only containers that are microwave-safe.
- You can also defrost food manually. To do so, select the microwave Cooking/Reheating function with a power level of 180 W. Refer to the section entitled "Cooking/Reheating" on page 40 for further details.





## Guide to Auto Speed Defrost Settings

The following table presents the various Auto Defrost programmes, quantities, standing times and appropriate recommendations. These programmes use microwave energy only. Remove all packaging material before defrosting. Place meat, poultry and fish on the ceramic tray.

No	Food item	Weight (kg)	Accessory	Shelf level	Standing time (min.)	Recommendation
1	Meat	0.2-2.0	Ceramic tray	1	20-90	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat.
2	Poultry	0.2-2.0	Ceramic tray	1	20-90	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions.
3	Fish	0.2 -2.0	Ceramic tray	1	20-60	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets.
4	Bread / Cake	0.1-1.0	Ceramic tray	1	10-30	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on ceramic tray and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short / crust pastry, fruit and cream cakes as well as for cake with chocolate topping.
5	Fruit	0.1-1.0	Ceramic tray	1	5-15	Distribute frozen fruit evenly on ceramic tray. This programme is suitable for fruits like raspberries, mixed berries, and tropical fruits.



### Important

- The Speed Defrost Mode uses microwave energy to heat food.
- Therefore guidelines for cookware and other microwave safety precautions must be strictly observed when using this mode.




## HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave to:

- Defrost
- Cook

### Cooking Principle

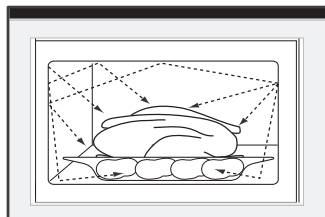

1. The microwaves generated by the magnetron are distributed uniformly by using stirrer distribution system. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
  - Quantity and density
  - Water content
  - Initial temperature (Refrigerated or not)



### Important

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven.

Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre
- The same temperature throughout the food











## USING MICROWAVE MODE

Microwaves are high frequency electromagnetic waves. In microwave cooking, microwave energy penetrates food, attracted and absorbed by its water, fat and sugar content. The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.


### Setting Microwave Mode

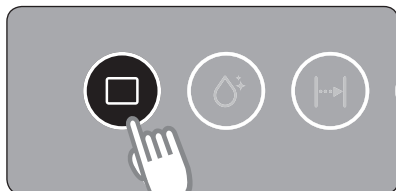

- 1** Press the **COOKING FUNCTION SELECT** button. Time and power level will appear on display.

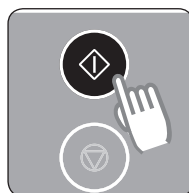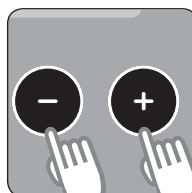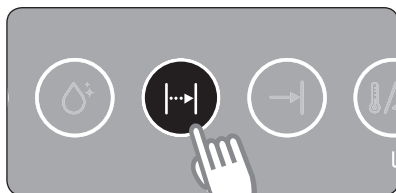

- 2** To change cooking time, press **COOKING TIME** button and press **CONTROL** button to cooking desired time. When cooking time is set, **START** will blink. If you do not wish to change power level, press **START** button to start cooking.

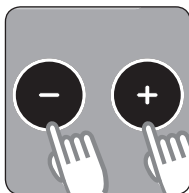

- 3** To change power level, press **TEMPERATURE/POWER LEVEL** button and Press **CONTROL** button to desired level. Refer to Cooking Guides (pages 35-41) for guidelines on appropriate cooking times and power levels.

- 4** Press **START** button to start cooking.



## Guide to Microwave Power Levels

Power Level	Percentage (%)	Output power (W)	Remark
HIGH	100	900	For heating up liquids.
HIGH LOW	83	750	For heating up and cooking food.
MEDIUM HIGH	67	600	For heating up and cooking food.
MEDIUM	50	450	For cooking meat and heating up delicate foods.
MEDIUM LOW	33	300	
DEFROST	20	180	For defrosting and continued cooking.
LOW	11	100	For defrosting delicate foods.

## Microwave Cookware Guide

Cookware used for Microwave Mode must allow microwaves to pass through and penetrate food. Metals such as stainless steel, aluminum and copper reflect microwaves. Therefore, do not use cookware made of metallic materials. Cookware marked microwave-safe is always safe for use. For additional information on appropriate cookware refer to following guide and always use ceramic tray on shelf Level 1 when using microwave mode.

Cookware	Microwave-Safe	Comments
Aluminium foil	✓ ✕	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crusting plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Do not preheat for more than 8 minutes. Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Some frozen foods are packaged in these dishes. Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✕	May catch fire.
• Recycled paper or metal trims	✕	May cause arcing.





Cookware	Microwave-Safe	Comments
<b>Glassware</b>		
<ul style="list-style-type: none"><li>• Oven-to-table ware</li></ul>	✓	Can be used, unless decorated with a metal trim.
<ul style="list-style-type: none"><li>• Fine glassware</li></ul>	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
<ul style="list-style-type: none"><li>• Glass jars</li></ul>	✓	Must remove the lid. Suitable for warming only.
<b>Metal</b>		
<ul style="list-style-type: none"><li>• Dishes</li></ul>	✗	May cause arcing.
<ul style="list-style-type: none"><li>• Freezer bag twist ties</li></ul>	✗	
<b>Paper</b>		
<ul style="list-style-type: none"><li>• Plates, cups, napkins and Kitchen paper</li></ul>	✓	For short cooking times and warming. Also to absorb excess moisture.
<ul style="list-style-type: none"><li>• Recycled paper</li></ul>	✗	May cause arcing.
<b>Plastic</b>		
<ul style="list-style-type: none"><li>• Containers</li></ul>	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
<ul style="list-style-type: none"><li>• Cling film</li></ul>	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
<ul style="list-style-type: none"><li>• Freezer bags</li></ul>	✓ ✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
<b>Wax or Grease-proof Paper</b>	✓	Can be used to retain moisture and prevent spattering.

**Note**

“Arcing” is the microwave term for sparks in the oven.

✓ : Recommended

✓ ✗ : Use Caution

✗ : Unsafe



## Microwave cooking guide

### General guidelines

#### Food suitable for microwave cooking

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob.

#### Covering during cooking

Food should be covered during cooking, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways such as with a ceramic plate, plastic cover or microwave suitable cling film.

#### Standing times

After cooking, it is important to let food stand for recommended standing time to allow the temperature to even out within the food.

#### Cooking guide for frozen vegetables

Use a suitable glass Pyrex bowl with lid. Cook covered for the minimum time (see table).

Continue cooking to get the result you prefer. Stir twice during cooking and once after cooking.

Add salt, herbs or butter after cooking. Keep covered during standing time.

Food	Portion (g)	Power (W)	Time (min.)	Standing time (min.)	Instructions
Spinach	150	600	5-7	2-3	Add 15 ml (1 tbsp) cold water.
Broccoli	300	600	8-9	2-3	Add 30 ml (2 tbsp) cold water.
Peas	300	600	7-8	2-3	Add 15 ml (1 tbsp) cold water.
Green beans	300	600	7½-8½	2-3	Add 30 ml (2 tbsp) cold water.
Mixed vegetables (Carrots/peas/corn)	300	600	7-8	2-3	Add 15 ml (1 tbsp) cold water.
Mixed vegetables (Chinese style)	300	600	7½-8½	2-3	Add 15 ml (1 tbsp) cold water.





## Cooking guide for fresh vegetables

Use a suitable glass Pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp) for every 250 g unless another water quantity is recommended (see table). Cook covered for the minimum time (see table). Continue cooking to get the result you prefer. Stir once during and after cooking.

Add salt, herbs or butter after cooking. Cover during the 3 minute standing time.



### Hint

Cut fresh vegetables into even sized pieces. The smaller they are cut the quicker they are cooked.



### Note

All fresh vegetables should be cooked using full microwave power (900 W).

Food	Portion (g)	Time (min.)	Standing time (min.)	Instructions
Broccoli	250 500	3-4 6-7	3	Prepare even sized florets. Arrange the stems to the centre.
Brussels sprouts	250	5-6	3	Add 60-75 ml (5-6 tbsp.) water.
Carrots	250	4-5	3	Cut carrots into even sized slices.
Cauliflower	250 500	4-5 7-8	3	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre.
Courgettes	250	3-4	3	Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender.
Egg plants	250	3-4	3	Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice.
Leeks	250	3-4	3	Cut leeks into thick slices.
Mushrooms	125 250	1-2 2-3	3	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving.
Onions	250	4-5	3	Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water.
Pepper	250	4-5	3	Cut pepper into small slices.



Food	Portion (g)	Time (min.)	Standing time (min.)	Instructions
Potatoes	250 500	4-5 7-8	3	Weigh the peeled potatoes and cut them into similar sized halves or quarters.
Turnip cabbage	250	5-6	3	Cut turnip cabbage into small cubes.

## Cooking guide for rice and pasta

**Rice** Use a large glass Pyrex bowl with lid. (Note that rice doubles in volume during cooking.) Cook covered. After cooking time is over, stir before letting stand. Add salt or herbs and butter. Note that rice may not have absorbed all water after the cooking time is finished.

**Pasta** Use a large glass Pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered. Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Portion (g)	Power (W)	Time (min.)	Standing time (min.)	Instructions
White rice (Parboiled)	250 375	900	15-16 17½-18½	5	Add 500 ml cold water. Add 750 ml cold water
Brown rice (Parboiled)	250 375	900	20-21 22-23	5	Add 500 ml cold water. Add 750 ml cold water
Mixed rice (Nice + Wild rice)	250	900	16-17	5	Add 500 ml cold water.
Mixed corn (Rice + Grain)	250	900	17-18	5	Add 400 ml cold water.
Pasta	250	900	10-11	5	Add 1000 ml hot water.





## Reheating

Your microwave oven will reheat food in a fraction of the time a conventional oven takes.

### Arranging and Covering

Avoid reheating large items such as joints of meat since they tend to overcook and dry out before the centre is piping hot. You will have more success reheating smaller pieces. Keeping food covered while heating will also help prevent drying.

### Power Levels

Different power levels can be used for reheating foods.

In general, for large quantities of delicate food or foods that heat up quickly, such as mince pies, it is better to use a lower power level.

### Stirring

Stir well or turn food over during reheating for best results. When possible, stir again before serving. Stirring is especially important when heating liquids.

### Heating and Standing Times

When reheating food for the first time, it is helpful to make a note of the time taken for future reference. Avoid overheating. If uncertain, it is preferable to underestimate cooking time. Then extra heating time can be added, if necessary. Always make sure that reheated food is piping hot throughout. Allow food to stand for a short time after reheating to let the temperature even out. The recommended standing time after reheating is 2-4 minutes



## Reheating liquids

Take special care when heating liquids. To prevent eruptive boiling and possible scalding, place a spoon or glass stick in the beverage. Stir during heating and always stir after heating.

Allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out.

## Reheating baby food

### Baby Food

Extra caution should also be exercised when reheating baby foods. Put food into deep ceramic plate. Cover with plastic lid. Stir well after reheating. Let stand for 2-3 minutes before serving. Stir again and check temperature. Recommended serving temperature is between 30-40 °C.

### Baby Milk

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with nipple on, as the bottle may explode if overheated. Shake well before standing time and again before serving. Always carefully check the temperature of baby milk or food before serving.

Recommended serving temperature is 37 °C.

## Defrosting

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be a great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible.

Check the food occasionally to make sure that it does not feel warm.

If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, **STOP/CANCEL** thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting.

The standing time for complete defrosting will vary depending on the quantity defrosted.

Please refer to the table on the next page.



### Hint

Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

Frozen foods should be defrosted using defrosting power level (180 W).







Food	Portion	Time (min.)	Standing time (min.)	Instructions
<b>Meat</b>				
Minced beef	250 g 500 g	6-7 10-12	15-30	Place the meat on the ceramic plate. Shield thinner edges with aluminium foil. Turn over after half of defrosting time.
Pork steaks	250 g	7-8		
<b>Poultry</b>				
Chicken pieces	500 g (2 pcs)	12-14	15-60	First, put chicken pieces first skin-side down, whole chicken breast-side-down on ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time.
Whole chicken	1200 g	28-32		
<b>Fish</b>				
Fish fillets	200 g	6-7	10-25	Put frozen fish in the middle of ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends of fillets and tail of whole fish With aluminium foil. Turn over after half of defrosting time.
Whole fish	400 g	11-13		
<b>Fruit</b>				
Berries	300 g	6-7	5-10	Spread fruit on a flat, round glass dish with a large diameter.
<b>Bread</b>				
Bread rolls (each ca. 50 g)	2 pcs 4 pcs	1-1½ 2½-3	5-20	Arrange rolls in a circle or bread horizontally on kitchen paper on the ceramic plate. Turn over after half of defrosting time.
Toast/Sandwich	250 g 500 g	4-4½ 7-9		



## Quick & Easy

### Melting butter

Put 50 g of butter into a small deep glass dish. Cover with plastic lid.  
Heat for 30-40 seconds using 900 W.

### Melting chocolate

Put 100 g of chocolate into a small deep glass dish.  
Heat for 3-5 minutes using 450 W.  
Stir once or twice during melting.

### Melting crystallized honey

Put 20 g crystallized honey into a small deep glass dish.  
Heat for 20-30 seconds using 300 W.

### Melting gelatine

Place dry gelatine sheets (10 g) in cold water for 5 minutes.  
Put drained gelatine into a small glass Pyrex bowl.  
Heat for 1 minute using 300 W.  
Stir after melting.

### Cooking glaze or icing

Mix instant glaze (approximately 14 g) with 40 g of sugar and 250 ml of cold water.  
Cook uncovered in a glass Pyrex bowl using 900 W until glaze/icing is transparent (about 3½ to 4½ minutes). Stir twice during cooking.

### Cooking jam

Put 600 g of fruits such as mixed berries in a suitably sized glass Pyrex bowl.  
Add 300 g of preserving sugar and stir well.  
Cook covered for 10-12 minutes using 900 W.  
Stir several times during cooking.  
Empty directly into small jam glasses with twist-off lids.  
Let it stand with lid on for 5 minutes.

### Cooking pudding

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass Pyrex bowl with lid.  
Cook covered for 6½ to 7½ minutes using 900 W.  
Stir several times during cooking.

### Browning almond slices


Spread 30 g sliced almonds evenly on a medium-sized ceramic plate.  
Heat for 3½ to 4½ minutes using 600 W, stirring several times.  
Let stand for 2 to 3 minutes in the oven.






## SWITCHING OFF THE BEEPER

The oven beeps at the end of cooking, "End" blinks 4 times on the display.

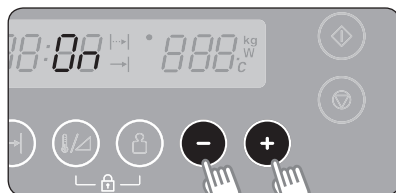

- 1 To switch beeper off, press **CONTROL** button (⊖)(⊕)button at the same time and hold for one second.

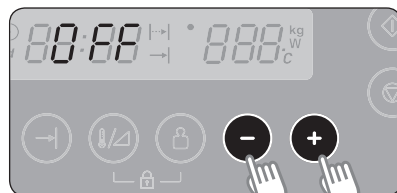

- 2 To switch beeper back on, press **CONTROL** button (⊖)(⊕)button again at the same time and hold for one second.


## CHILD SAFETY LOCK

The oven's Child Safety Lock allows you to lock the control panel to protect the oven against unintended use.

### To lock oven




- 1 Press **TEMPERATURE/POWER LEVEL** button and **WEIGHT** button at the same time and hold for 3 seconds.

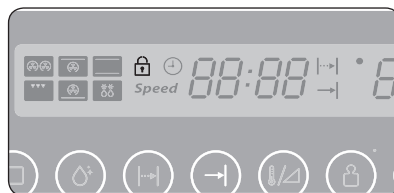


- 2 Lock symbol appears on display indicating all functions locked.

### To unlock oven

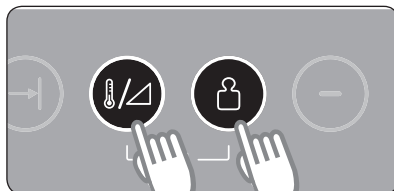

- 1 Press **TEMPERATURE/POWER LEVEL** button and **WEIGHT** button at the same time and hold for 3 seconds.

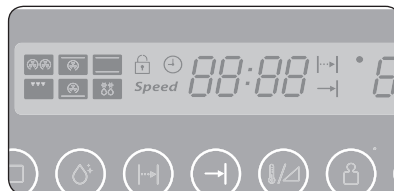


- 2 Lock symbol disappears indicating functions unlocked.



# cleaning and care


## USING THE STEAM CLEAN FEATURE

The Steam Clean feature allows you to sanitize your oven in just 15 minutes. The STEAM CLEAN process takes three and a half minutes, and the standby time for the process is eleven and a half minutes.

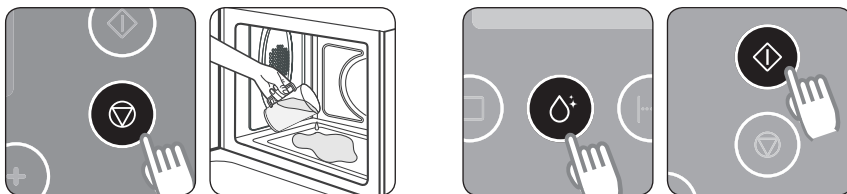

- 1** Press the **STOP/CANCEL** button .  
► Pour about 100 ml water onto the floor of the empty oven.

- 2** Press **STEAM CLEAN** button and Press the **START** button  
► After 15 minutes, the oven will stop automatically. Wipe it out with a dry cloth.

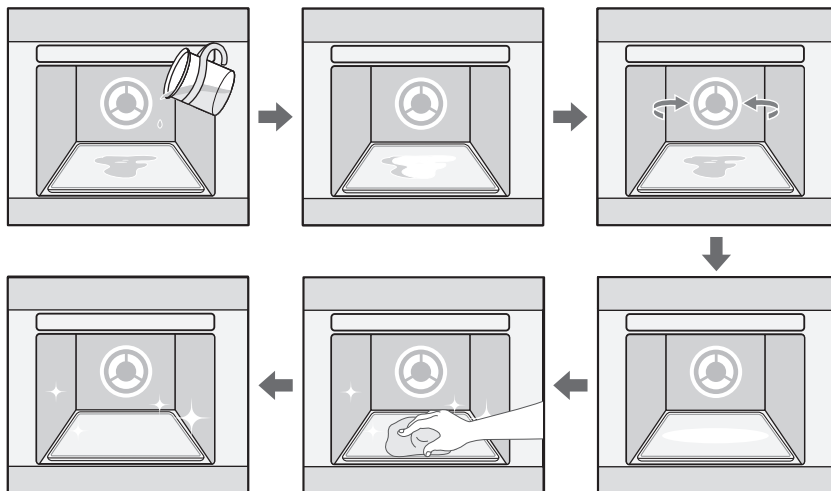

### Important

- Use this feature only when oven has cooled completely to room temperature.
- Do NOT use distilled water.
- Do NOT use high-pressure water cleaners or steam jet cleaners for safety reasons.





## CLEANING YOUR MICROWAVE OVEN

Clean your oven regularly to prevent grease and food particles from building up, especially on inside and outside surfaces, door and door seals.

1. Clean outside surfaces with a soft cloth and warm soapy water. Rinse and dry.
2. Remove any splashes or stains on inside surfaces with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the floor of the empty oven and heat for ten minutes at maximum power.
4. Wash the inside.



### Important

- Take special care NOT to spill water in the vents.
- NEVER use abrasive products or chemical solvents.
- ALWAYS ensure that door seals are clean to prevent particles from building up so that the door can close properly.



# troubleshooting & error code

---

## **STORING AND REPAIRING YOUR MICROWAVE OVEN**

---

Repairs should only be made by a qualified service technician.

If oven requires servicing, unplug the oven and contact the nearest Samsung Customer Service Center.

When calling, please have the following information ready:

- The model number and serial number (Can be found at rear of the oven.)
- Warranty details
- Clear description of the problem

If oven must be temporarily stored, choose a clean dry place as dust and dampness can cause damage.



## TROUBLESHOOTING

If you have problems with your oven, try the solutions suggested below. They may save you the time and inconvenience of an unnecessary service call.

### **Food remains uncooked.**

- Ensure timer has been set correctly and Start button pressed.
- Firmly close door.
- Make sure you have not blown a fuse or triggered a circuit breaker.

### **Food is either overcooked or undercooked.**

- Make sure appropriate cook time was used.
- Make sure appropriate power level was used.

### **Sparkling and cracking (arcing) occur inside the oven.**

- Make sure you are using proper cookware without metal trimmings.
- Make sure no forks or other metal utensils have been left inside the oven.
- If using aluminum foil, make sure it is not too close to inside walls.

### **The oven causes interference with radios or televisions.**

- Slight interference on televisions or radios may occur when the oven is operating.  
To minimize this effect, try to install oven away from televisions, radios and aerials.

### **Electronic interference causes DISPLAY to be reset.**

- Disconnect the power plug and reconnect it. Reset the time.

### **Condensation appears inside the oven.**

- This is a normal occurrence. Simply wipe away after cooking.

### **The fan continues to operate after the oven has been turned off.**

- This is a normal occurrence. Cooling fan may continue to operate for up to three minutes

after oven has been turned off.

### **Air flow is detected around the door and outer casing.**

- This is a normal occurrence.

### **Light reflection around the door and outer casing.**

- This is a normal occurrence.

### **Steam escapes from around the door or vents.**


 
 
 
- This is a normal occurrence.

### **A clicking sound occurs while the oven is operating, especially in defrosting mode.**

- This is a normal occurrence.



## ERROR CODE

Error Code	General Functions
	<b>TEMP SENSOR OPEN</b> In case the value of a temperature sensor is more than 250 °C during operation / cancellation.
	<b>TEMP SENSOR SHORT</b> In case the value of a temperature sensor is less than 5 °C during operation / cancellation.
	<b>OVER 210 °C DURING OPERATION OF MWO</b> In case the temperature rises over 210 °C during operation of MWO (FIRE sensed).
	<b>DAMPER S/W</b> In case it fails to sense DAMPER whether to open or close for 2 minutes.







# Installation & Wiring Instruction

## IMPORTANT NOTE :

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved to BS1363 of the same rating must be used. Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your Dealer. If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your Dealer for assistance. However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket, as there is a risk of shock hazard from the bared flexible cord.

## WIRING INSTRUCTIONS

### WARNING THIS APPLIANCE MUST BE EARTHED

This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock providing an escape wire for the electric current. The appliance is equipped with a mains lead which includes an earth wire for connecting to the earth terminal of your mains plug. The plug must be plugged into a socket that is properly installed and earthed.



#### Important

The wires in this mains lead are coloured in accordance with the following code:

- Green-and yellow : Earth
- Blue : Neutral
- Brown : Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.


Connect the green-and yellow wire to the terminal in the plug marked with the letter E or the earth symbol ( $\perp$ ) or coloured green or green-and-yellow.

Connect the blue wire to the terminal marked with the letter N or coloured black.



## Important

Consult a qualified electrician or service technician if in doubt about any of these instructions. The manufacturer of this oven will not accept any liability for damage to persons or material for non observance of these requirements. There are no user-serviceable parts inside the oven and if the mains lead of this appliance is damaged, it must only be replaced by qualified service personnel approved by the manufacturer because special tools are required.

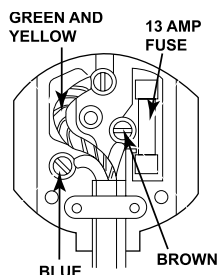

## WARNING

Ensure that the plug and power cord are not damaged before use. If you have any reason to remove the moulded plug from this appliance, immediately remove the fuse and dispose of the plug. Do not connect the plug to a mains socket under any circumstances as there is a danger of electric shock.

## CIRCUITS

Your microwave oven should be operated on a separate circuit from other appliances. Failure to do this may cause the circuit breaker to trip, the fuse to blow, or the food to cook more slowly.

# COOKING INSTRUCTIONS ON FOOD PACKAGING

## MICROWAVE SYMBOLS

On the front of your oven there is a microwave oven symbol, as shown below. This symbol has been introduced for your benefit when cooking or reheating packaged food.



Packaged food is also, increasingly, using a microwave symbol similar to the one below. When you see this.



Symbol on food packaging, the cooking instructions are based on either the IEC Power Output Rating, or the Reheating Categories A, B, C, D or E.





## COOKING INSTRUCTIONS

The IEC Power Output rating is an internationally standardised rating, so all microwave manufacturers now use the same method of measuring power output. If food packaging gives cooking instructions based on IEC Power ratings, set cooking times according to the IEC Power of your oven.

### **For example :**

If the cooking instructions are based on a 650W oven, then you will need to reduce some cooking time for the FQ115T001 (900W).

Ready meals are now very convenient and popular. These are meals which are already prepared and cooked by the food manufacturer, and then frozen, chilled or vacuum sealed for long life.

Increasingly, heating times for such ready meals are being based on the Heating Categories A, B, C, D and E.

On this instance, simply match the heating category of your oven to the instructions on the food package, and set your timer accordingly.

### **For example :**

If the heating instructions are 3 minutes on HIGH for a D category oven, then you will need to set your timer for less than 3 minutes on HIGH for the FQ115T001 (E category).



### **Important**

Always remember that cooking instructions are intended only as a guide. If you have followed the instructions and the food is still not piping hot throughout, simply return it to the oven and cook it until it is.



# technical specifications

## TECHNICAL SPECIFICATIONS

Samsung strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

By right of the common regulation 2/1984 (III.10) BKM-IpM. we as distributors testify, that the FQ215 ovens of Samsung comply with the undermentioned technological parameters.

<b>Model</b>	<b>FQ215</b>
<b>Power Source</b>	230 V ~ 50 Hz
<b>Power Consumption</b> Maximum Power Microwave Top Grill Bottom Heater Dual Convection	3150 W 1650 W 2800 W 1000 W 3000 W
<b>Output Power</b>	100 W / 900 W (IEC - 705) 240V : 900W 230V : 850W
<b>Operating Frequency</b>	2450 MHz
<b>Magnetron</b>	OM75P (20)
<b>Cooling Method</b>	Cooling fan motor
<b>Dimensions (W x H x D)</b> Outside Oven Cavity Net.	596 x 460 x 520 mm 429 x 229 x 430 mm
<b>Volume</b>	42 liter
<b>Weight</b> Net Shipping	37 kg approx 46 kg approx





note

---





note

---





note

---





## QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRIA	0810-SAMSUNG (7267864, € 0.07/Min)	<a href="http://www.samsung.com">www.samsung.com</a>
BELGIUM	02-201-24-18	<a href="http://www.samsung.com/be">www.samsung.com/be</a> (Dutch) <a href="http://www.samsung.com/be_fr">www.samsung.com/be_fr</a> (French)
DENMARK	70-70-19-70	<a href="http://www.samsung.com">www.samsung.com</a>
FINLAND	030-6227 515	
FRANCE	01-48-63-00-00	
GERMANY	01805-SAMSUNG (726-7864 € 0,14/Min)	
ITALIA	800-SAMSUNG (726-7864)	
LUXEMBURG	261-03-710	
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0.10/Min)	
NORWAY	815-56-480	
PORTUGAL	80820-SAMSUNG (726-7864)	
SPAIN	902-1-SAMSUNG (902 172 678)	
SWEDEN	0771-726-7864 (SAMSUNG)	
U.K	0330 SAMSUNG (7267864)	
EIRE	0818-717100	
SWITZERLAND	0848-SAMSUNG (7267864, CHF0.08/Min)	<a href="http://www.samsung.com/ch">www.samsung.com/ch</a> <a href="http://www.samsung.com/ch_fr">www.samsung.com/ch_fr</a> (french)

Code No.: DE68-03869E

